

45 R.P.M. SPINDLE

This 45 R.P.M. spindle will enable you to play 45 R.P.M. records without using inserts.

To install the 45 R.P.M. spindle simply grasp it with the bottom of the 45 pointing toward the front of the changer, and place it over the small spindle pressing firmly down to the turntable.

After removing a stack of 45 R.P.M. records, be certain to again press down firmly on the 45 R.P.M. spindle this will assure proper operation.

To remove the 45 R.P.M. spindle it is only necessary to lift it off the small spindle.

