


OPERATING INSTRUCTIONS (XE-70M CONTROLLER)

■ USER INTERFACE

The standard user interface configuration of the controller consists of the membrane and the LCD display. The membrane consists of five command keys (Start, Stop, Load, Unload, and Reset), four navigation keys (Up, Right, Left and Down), and an Edit mode selection key (Enter). These keys, in conjunction with the graphics display and the LED icons, make up the user interface to the compressor.

Figure 4: Xe-70M

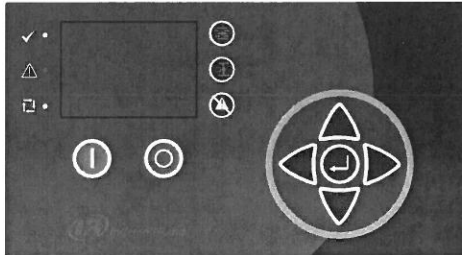

■ LED STATUS ICONS

Three LED icons are used to indicate the current status of the control system from a distance and are located on the upper left side of the user interface.

Table 2: Xe-70M LED Status Icons

Icon	Name	Function
	OK	Illuminates when no Warnings or Trips are sensed. Can be in a Ready or Not Ready state. This icon will flash when the machine is Running Unloaded.
	Alert	Illuminates when a Warning (flashes) or Trip (constant ON) is sensed. Can be in a Ready (Warning) or Tripped state.
	Auto	Illuminates when the compressor stops in auto restart.

■ COMMAND KEYS

These keys command the controller to perform actions as specified in the following table. When any of these keys are pressed the action below will be initiated and logged in the event log.

Table 3: Xe-70M Command Keys

Icon	Name	Function
	Load	Puts the compressor into the selected mode of operation. Unit will load if the pressure conditions are right.
	Unload	Puts the compressor into an unloaded state. Unit will run unloaded indefinitely.
	Reset	Clears Warnings and Trips once the fault condition is corrected.
	Start	Starts the compressor.
	Stop	Stops the compressor. This button should be pressed instead of the Emergency Stop for normal stopping operation.


Icon	Name	Function
	Enter	Toggles the display between the Navigation mode and the Edit mode.

NOTICE
The Load and Unload keys are not used on the variable speed compressors.

■ NAVIGATION KEYS

There are four navigation keys (UP, RIGHT, DOWN and LEFT). While the ENTER key is not considered a navigation key, it is used in conjunction with the navigation keys to make or confirm a selection.

Figure 5 : Navigation Keys

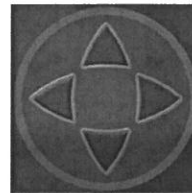

The navigation keys roll over. Pressing one of the navigation keys will lead the user down a navigation path. Each time the key is pressed, another step in the path is taken. Once the end of a navigation path is reached, pressing the key one more time will bring the user back to the beginning of the path. Pressing the opposite key will move the user through the navigation path in the opposite direction. Once the beginning is reached, pressing the opposite key will take the user to the end of the path.

■ DISPLAY LAYOUT

Figure 6 : Display Layout

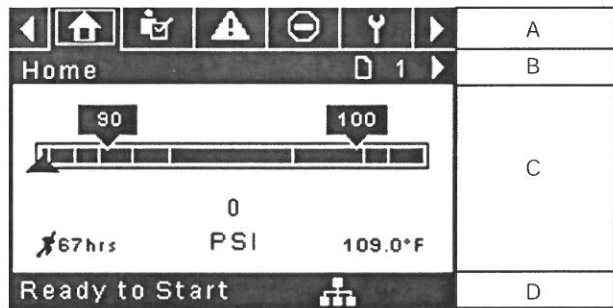


Table 4 : Display Layout

Key	Name	Description
A	Folder Bar	Uses tabs to graphically identify each folder.
B	Title Bar	Identifies current folder and page (underlined).
C	Page Content	Content of the current page.
D	Dashboard	Displays system status.

FOLDER NAVIGATION AND ICONS

To move among the tabbed folders shown on the LCD display, press the RIGHT and LEFT keys. The navigation rolls over from the last to the first folder and vice-versa.

Table 5 : Folder Bar Icons

Folder Name	Icon	Description
Home		System performance and status main information. The first page of this folder is the default page when the controller first powers up.
Operator Settings		System options and configuration settings.
Events		System events log.
Trip History		Details on the most recent trips.
Maintenance		Status and notification setup for compressor maintenance items.
General Settings		General settings such as Language, Time, and Units of Measure.
Integral Sequencing		Integral Sequencing communication status and configuration.
Status		Measurements or status from/of all analog and digital I/O.
Factory Settings		Compressor tuning parameters. Also displays hardware and software versions.

PAGE NAVIGATION

Once the desired folder is selected, press the DOWN key to move to the page selection area and then use the RIGHT and LEFT keys to select the desired page. Use the UP key to get back to the folder tabs.

Table 6 : Title Bar Page Icons

Icon	Description
	Start of the page selection area.
	Indicates that there are more pages available by navigating right.
	Indicates that there are more pages available by navigating left.

ACCESSING PARAMETERS

After the desired page is selected, the page's parameters can be selected by using the DOWN key. The cursor will move to the next parameter each time the DOWN key is pressed. Use the UP key to go back to the previous one.


The cursor rolls over, so once the last parameter is selected, pressing the DOWN key will navigate the cursor to the Folder Bar. If the first parameter is selected, pressing the UP key will move the cursor to the page selection area.

Once selected, access parameters by pressing the ENTER key. Make changes using the NAVIGATION keys and then enter the setting by pressing the ENTER key again. After a parameter is accessed, pressing the ENTER key will enter the current setting into the control program and navigate the cursor back to the selected parameter on the page.

When the cursor is on a parameter that has an enabled/disabled box, pressing the ENTER key will cause the setting to toggle.

This icon appears on numeric entry windows (see Figure 69). Placing the cursor on it and then pressing the ENTER key will cancel the entry and any changes that were made.

Figure 7 : Numeric Entry Window

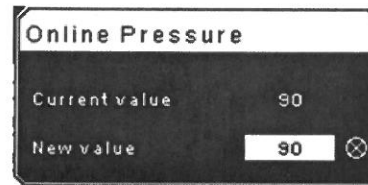

NOTICE

Not all pages have adjustable parameters. Some just have read-only information.

DASHBOARD ICONS

The dashboard is intended to be a quick at-a-glance view of system status. The following table lists standard dashboard icons and their definition. Note that the color of these icons changes based on the state set by the application while running.

Table 7 : Dashboard Icons

Name	Icon	Description
Remote Control		Remote control is enabled. This can be Remote Start/Stop, COM Control, Integral Sequencing or Web Control.
Service Required		A service reminder is nearing or has expired (i.e.: an air or oil filter needs to be changed).
Unloaded or Loaded	 	Compressor is in the unloaded state. Compressor is in the loaded state.

DASHBOARD STATUS MESSAGES

The dashboard also displays the current operating state of the compressor. The following states can be encountered during machine operation:

- **Ready to Start** – The compressor currently has no trip or start inhibit conditions present. The machine can be started by pressing the start button at any time.
- **Starting** – A start command has been given to the compressor and the start sequence is being performed. The time period for this state can vary depending on the starter type of the machine.
- **Load Delay** – The compressor is waiting for a small period of time after starting before allowing the machine to load. This ensures the machine is at operating conditions before loading.
- **Running Loaded** – The compressor is operating and producing air. The inlet valve is open and the blow-off valve is closed.
- **Running Unloaded** – The compressor is operating, but not producing air. The inlet valve is closed and the blow-off valve is open.
- **Reload Delay** – This is a brief period of time after the compressor has unloaded before it is allowed to load again. This gives the inlet and bypass valves time to reach their proper positions.
- **Auto-Restart** – The compressor has stopped due to pressure rising above the offline or auto-stop setpoints and auto-restart being enabled. The compressor will automatically restart when pressure falls to the online or target pressure setpoint.
- **Stopping** – The compressor has received a stop command and the stop sequence is being performed.
- **Blowdown** – The compressor must wait for a brief period of time after stopping its motor before it is allowed to start again. The compressor will restart at the end of the blowdown period if a start command is received during blowdown.
- **Not Ready** – The compressor has detected a condition that will not allow the compressor to start. The condition must be cleared before a start is allowed, but does not need to be acknowledged.
- **Tripped** – The compressor has detected an abnormal operational condition that has stopped the machine. A trip must be acknowledged by hitting the reset button before the compressor can start.
- **Processor Init** – The controller is being initialized.